

How to reboot an iLO using SSH

Written by Carlo Cacciafesta
Friday, 08 January 2010 13:42 -

How to reboot an iLO using SSH

The following commands can be used to reboot an HP iLO or iLO2 interface. This procedure is particularly useful when the iLO stops working properly and is not accessible from the server or via HTTP(S).

Use the following procedure:

- Use SSH to access the iLO device
- Log in to the iLO using administrative credentials
- Type the following command and press enter: "reset map1"
- The interface will reboot